

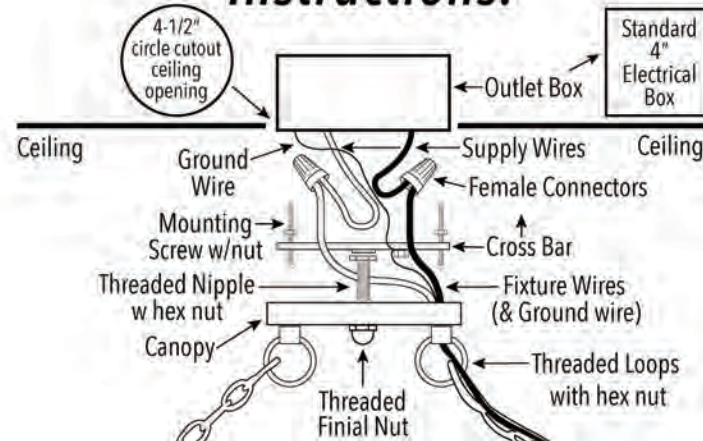
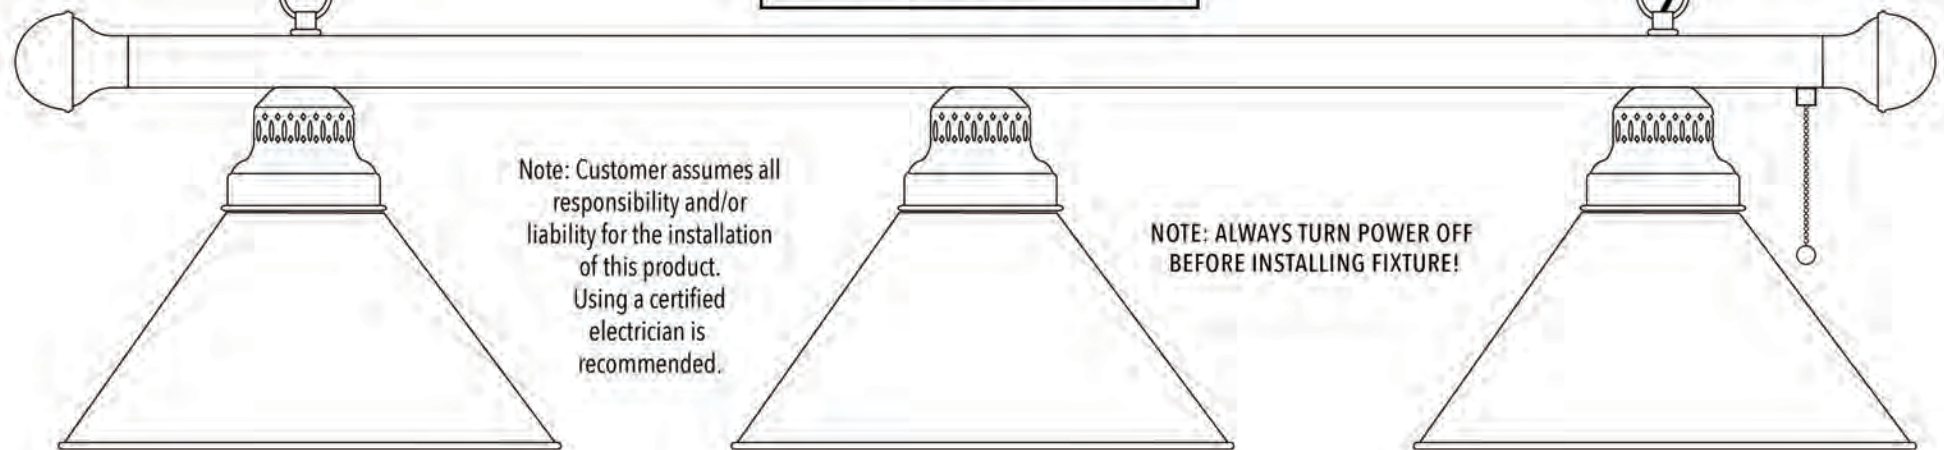


- Billiard Light comes with standard three prong plug.
- Cut off plug & split the conductors of the fixture wire about 4 inches (Note: be careful not to expose any of the wire inside of the insulation.) Strip both supply wires and fixture wires approximately 1/2"
- Disconnect power at main electrical panel before installation.
- Thread the mounting screws (2) into the cross bar.
- Align & attach cross bar with mounting screws to outlet box.
- Screw treaded nipple into center hole on cross bar & screw on hex nut. (may require adjustment for desired length).
- Pull supply wires (white and black & green ground wire if available) from outlet box.
- Feed fixture wires through right side threaded loop on canopy.
- Connect the supply ground wire (if available) to outlet box or to cross bar area with hex head screw.

Billiard Light Installation & Hard Wiring Instructions.

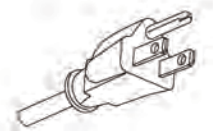

- Connect fixture ground wire to the outlet box or to cross bar area with hex screw.
- Connect the half of the fixture wire that is white, marked or has a ribbed surface to the outlet box supply wire (white).
- Connect the other half of the fixture wire that is black, unmarked or has a smooth surface to the outlet box supply wire (black or red).
- Use female connectors on each joined wire pair.
- Spread the electrical splices so that the black wire splice is on one side of the outlet box & the white wire splice is on the other side of the outlet box.
- Place canopy upward with threaded nipple feeding through canopy center hole.
- Adjust threaded nipple so canopy sits flush with ceiling.
- Screw finial ball nut onto threaded nipple.

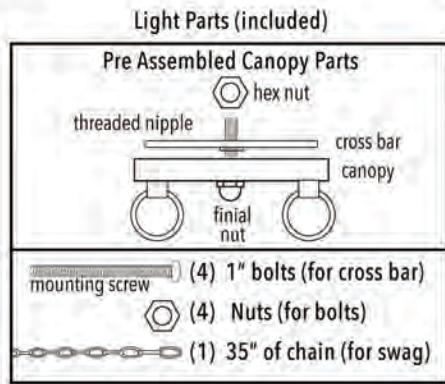


Note: Customer assumes all responsibility and/or liability for the installation of this product. Using a certified electrician is recommended.

NOTE: ALWAYS TURN POWER OFF BEFORE INSTALLING FIXTURE!

Billiard Light w/3 Prong Plug (standard) Installation



- Disconnect power at main electrical panel before installation.
- Determine type of anchoring required to hang light from ceiling.
- Attach cross bar with toggle bolt anchors or screws (flush with ceiling)
- Place canopy upward with threaded nipple feeding through canopy center hole.
- Adjust threaded nipple/hex nuts so canopy sits flush with ceiling.
- Screw finial ball nut onto threaded nipple.
- Plug into three prong outlet. For added length, plug into extension cord.
- For swag effect position where a ceiling hook will be located.
- Mount hook (using ceiling drywall sinker) with wood screw into sinker. (or)
- Mount hook (using poly bolt) with threaded bolt into drilled hole in ceiling dry wall. (or)
- Mount hook with wood screw (into wooden stud where applicable)

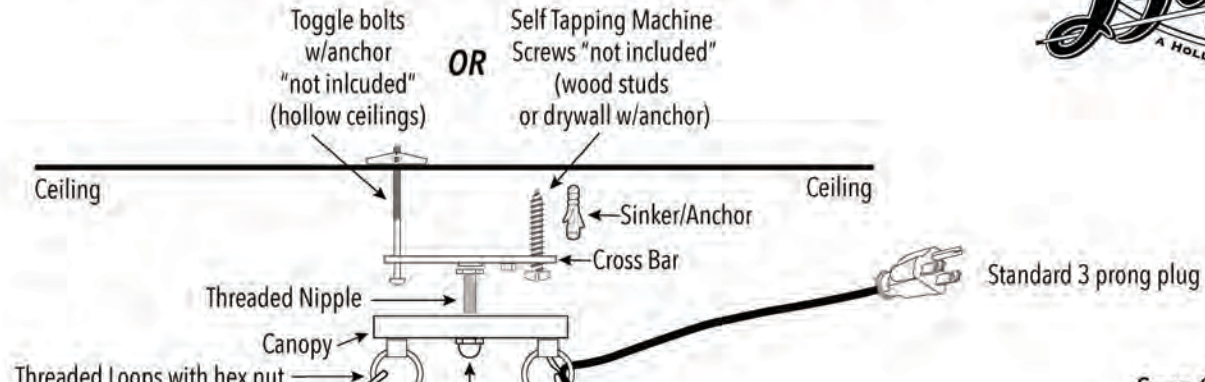



Swag Chain Hanging Option

- Drywall Sinker (Hollow Ceiling) or Wood stud
- Drywall Toggle Bolt (Hollow Ceiling)



(Not Included)

Light Parts (included)

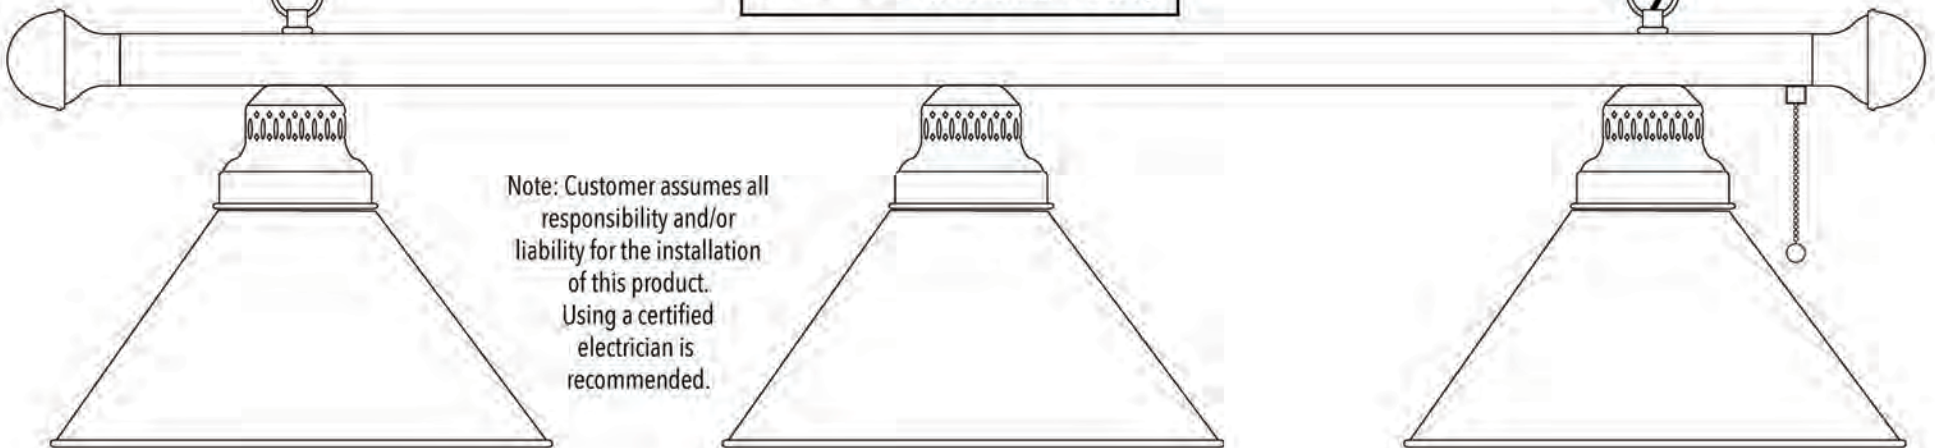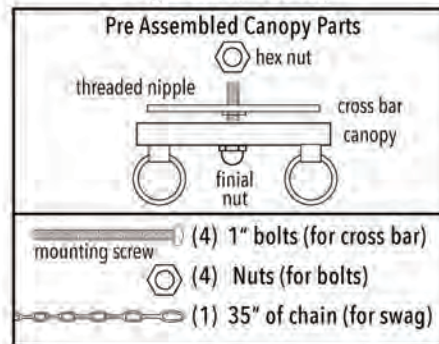

Note: Customer assumes all responsibility and/or liability for the installation of this product. Using a certified electrician is recommended.