




In The Box (Parts)


Bar Stool Assembly



Bucket with Seat & Swivel

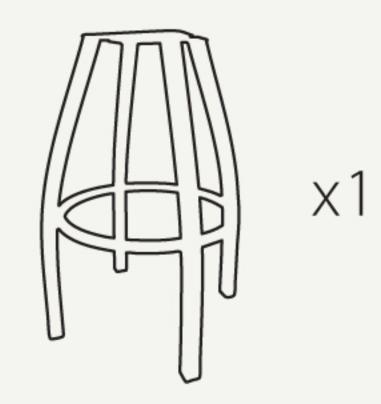

Base with Welded Top Plate

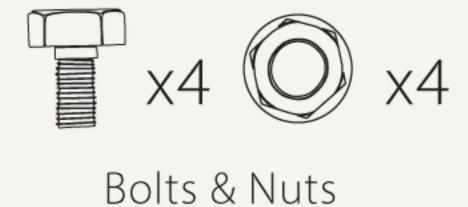


DOILS & MULS

Tools Needed






1) Place the bucket upside down on a sturdy, flat surface.

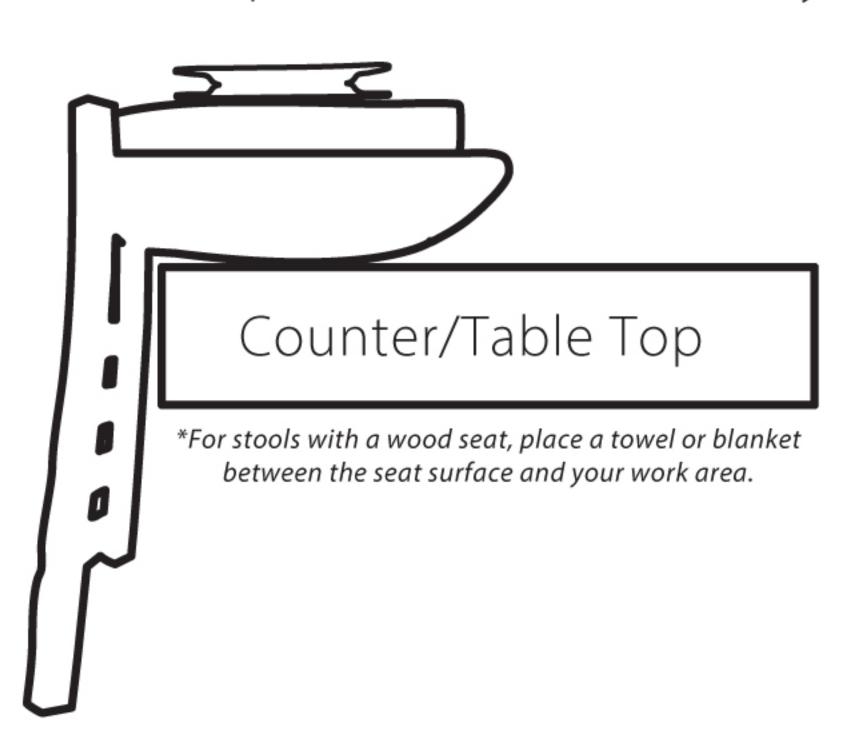

② Using firm, steady pressure, rotate the swivel approximately 45 degrees.

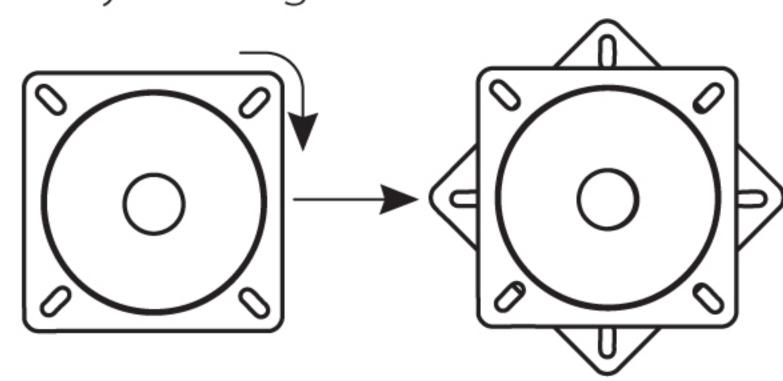

Note: Memory swivels require more force to rotate and will return to their original position when released.

3 Place the base upside down. Align the holes on the top plate with the holes on the swivel. Insert the bolts one at a time through the top plate, then thread each bolt with a nut and tighten securely.

